

Minimum Phase

The phase of a measurement is usually not minimal phase, due to influence of the room (reflections). REW can calculate via FFT the minimal phase from the frequency response.

Creating Minimal Phase

To create minimal phase copy for a measurement do the following steps:

1. Select the "All SPL" tab
2. Select the measurement that you want to create minimal phase for
3. Select "Actions" and "Measurement Actions"
4. Press "Minimum Phase Version"



Measurement phase before



Measurement phase after



From: <https://wiki.oscardegroot.nl/> - HomeWiki

Permanent link: <https://wiki.oscardegroot.nl/doku.php?id=audio:rew:minimum-phase&rev=1766393496>

Last update: 2025/12/22 08:51

