

Minimum Phase

The phase of a measurement is usually not minimal phase, due to influence of the room (reflections). REW can calculate via FFT the minimal phase from the frequency response.

Creating Minimal Phase

Method 1

To create minimal phase copy for a measurement do the following steps:

1. Select the "All SPL" tab
2. Select the measurement that you want to create minimal phase for
3. Select "Actions" and "Measurement Actions"
4. Press "Minimum Phase Version"




Method 2

To create minimal phase copy for a measurement do the following steps:

1. Select the "SPL & Phase" tab
2. Select "Actions"
3. Press "Generate Minimum Phase"



Measurement phase before

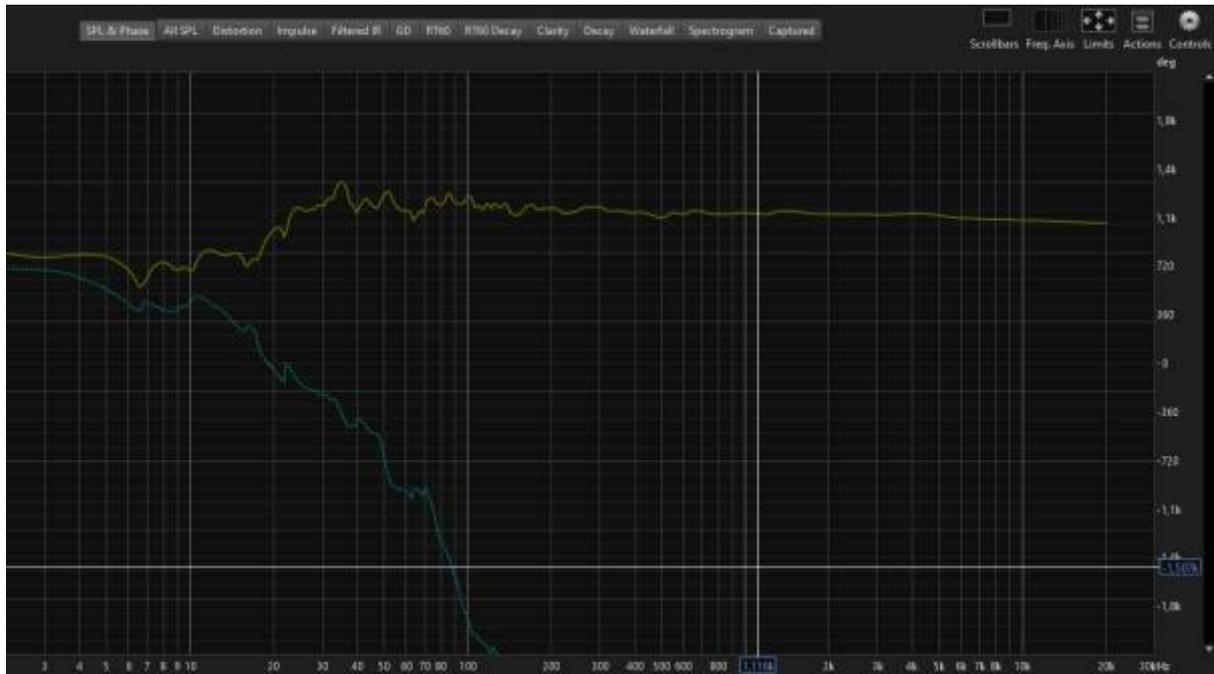

Measurement phase after



From:

<https://wiki.oscardegroot.nl/> - HomeWiki

Permanent link:

<https://wiki.oscardegroot.nl/doku.php?id=audio:rew:minimum-phase&rev=1766394086>

Last update: **2025/12/22 09:01**

