


# Alignment

## Measurements with/without timing

If a measurement was done without the option: "Use acoustic timing reference" there is no timing information and aligning is not required. REW will automatically have the Pulse Responses starting at 0 ms.



If a measurement was done with the option: "Use acoustic timing reference" there is timing information and aligning might be required. REW will show timing information with the Pulse Responses.

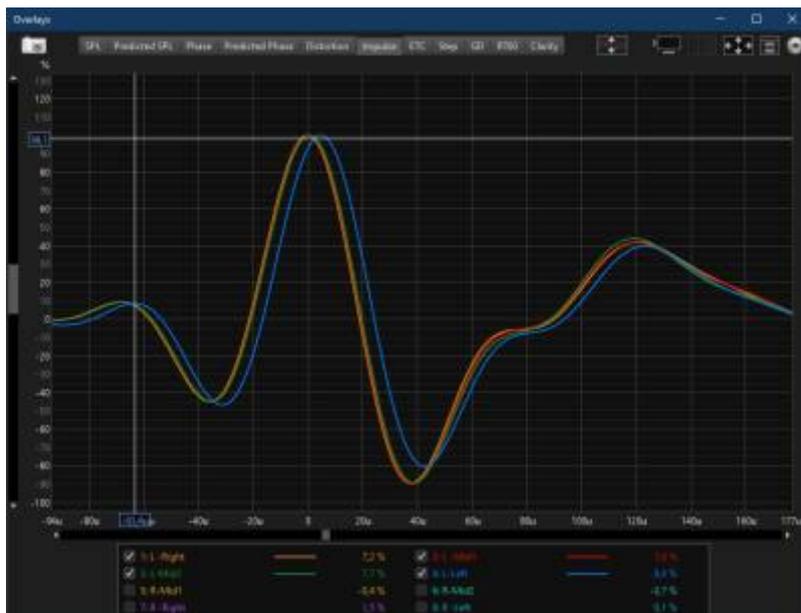

# Cross Correlation Align

From:

<https://wiki.oscardegroot.nl/> - HomeWiki

Permanent link:

<https://wiki.oscardegroot.nl/doku.php?id=audio:rew:time-alignment&rev=1766343070>

Last update: **2025/12/21 18:51**

