


# Alignment

## Measurements timing information


### Measurement without timing

If a measurement was done without the option: "Use acoustic timing reference" there is no timing information and aligning is not required. REW will automatically have the Pulse Responses starting at 0 ms.

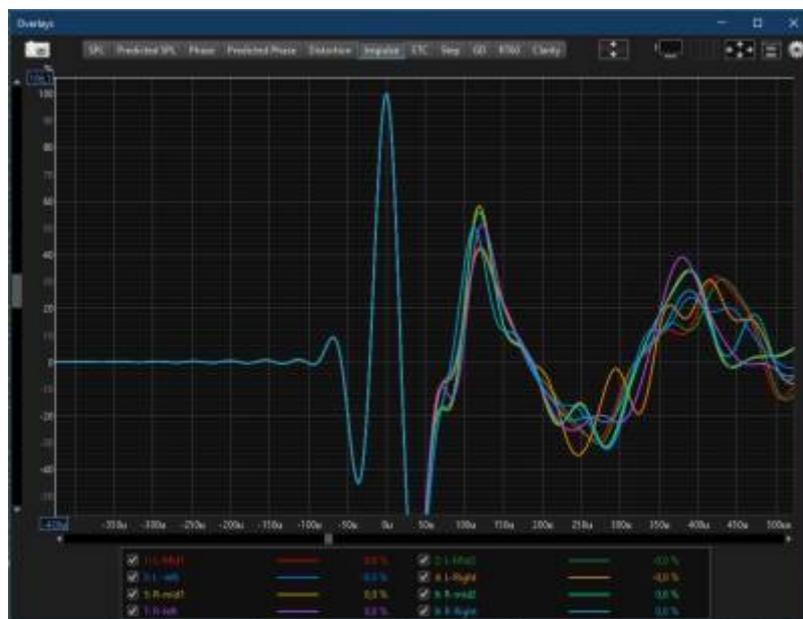

### Measurement with timing

If a measurement was done with the option: "Use acoustic timing reference" there is timing information and aligning might be required. REW will show timing information with the Pulse Responses.

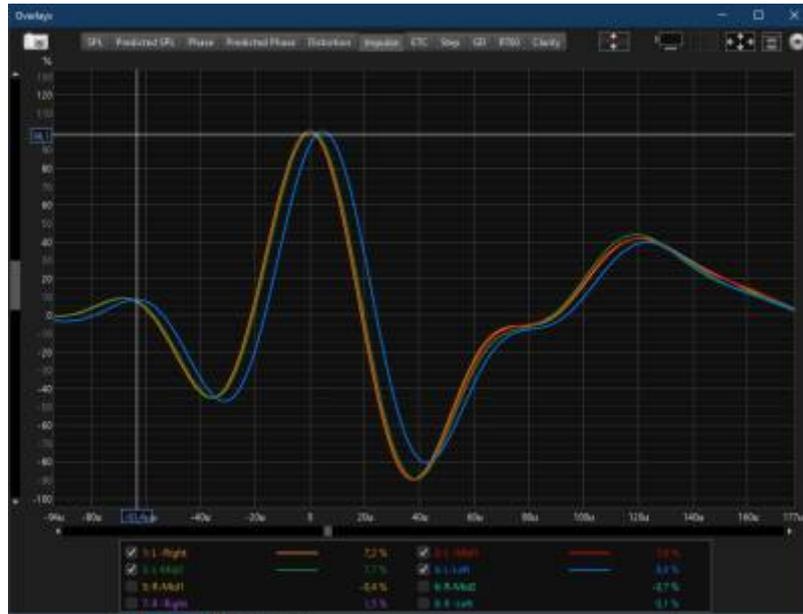

## Cross Correlation Align

From: <https://wiki.oscardegroot.nl/> - HomeWiki

Permanent link: <https://wiki.oscardegroot.nl/doku.php?id=audio:rew:time-alignment&rev=1766345731>

Last update: 2025/12/21 19:35

