

Build Commands

Core tools

Esp-idf commands can be executed using:

- **python**, Located in: `/esp32/idf-tools/python_env/idf5.2_py3.11_env/bin/python`
- **idf.py**, Located in: `/esp32/esp-idf/tools/idf.py`
- **esptool.py**, Located in: `/esp32/idf-tools/python_env/idf5.2_py3.11_env/bin/esptool.py`

idf.py to be invoked as:

```
$ idf.py <parameters>
```

esptool.py can be invoked in different ways:

```
$ esptool <parameters>
$ python -m esptool <parameters>
```

Common Build commands

```
idf.py --version
idf.py help
idf.py menuconfig
idf.py fullclean
idf.py build
```

From:

<https://wiki.oscardegroot.nl/> - HomeWiki

Permanent link:

<https://wiki.oscardegroot.nl/doku.php?id=esp:esp32:build-commands&rev=1788009417>

Last update: **2026/08/29 13:16**

