

Usefull Commands

Core tools

Esp-idf commands can be executed using:

- **idf.py**, Located in: */esp32/esp-idf/tools/idf.py*
- **python**, Located in: */esp32/idf-tools/python_env/idf5.2_py3.11_env/bin/python*
- **esptool.py**, Located in: */esp32/idf-tools/python_env/idf5.2_py3.11_env/bin/esptool.py*

Common commands

```
idf.py --version
idf.py help
idf.py fullclean
idf.py menuconfig
idf.py build
```

Full Flash

```
idf.py -p /dev/ttyACM0 flash
python -m esptool --chip esp32c3 -p /dev/ttyACM0 -b 460800 --before
default_reset --after hard_reset write_flash --flash_mode dio --flash_size
4MB --flash_freq 80m 0x0 build/bootloader/bootloader.bin 0x8000
build/partition_table/partition-table.bin 0xd000 build/ota_data_initial.bin
0x10000 build/LCR-Meter.bin 0x250000 default.config
```

Write Application to partition

```
python -m esptool --chip esp32c3 -p /dev/ttyACM0 -b 460800 --before
default_reset --after hard_reset write_flash --flash_mode dio --flash_size
4MB --flash_freq 80m 0x10000 build/ESR-Meter.bin
python ../../esp-idf/components/esptool_py/esptool/esptool.py -p
/dev/ttyUSB0 -b 460800 --before default_reset --after hard_reset --chip
esp32 write_flash --flash_mode dio --flash_size detect --flash_freq 40m
0x00130000 build/thermometer.bin
```

Read/Write config partition

Write Config to partition

```
esptool.py --port /dev/ttyACM0 write_flash --flash_mode qio 0x250000  
default.config
```

Read CONFIG from partition

```
esptool.py --port /dev/ttyACM0 -b 460800 --before default_reset --chip  
esp32c3 read_flash 0x250000 4096 downloaded.config
```

From:

<https://wiki.oscardegroot.nl/> - HomeWiki

Permanent link:

<https://wiki.oscardegroot.nl/doku.php?id=esp:esp32:commands>

Last update: **2025/04/14 17:48**

