

Monitor

With idf.py

Connect to the ESP with the idf.py:

```
idf.py -p /dev/ttyUSB0 monitor
```

With miniterm

Connect to the ESP with the miniterm that is part of the ESP-IDF installation:

```
~/development/esp32/idf-tools/python_env/idf4.2_py3.7_env/bin/miniterm.py  
/dev/ttyUSB0 115200
```

From:

<https://wiki.oscardegroot.nl/> - HomeWiki

Permanent link:

<https://wiki.oscardegroot.nl/doku.php?id=esp:esp32:esp-idf-environment:monitor>

Last update: **2022/01/15 11:38**

