

Python

Python compiler

As part of the toolkit a Python build environment will be installed at the following location:

```
cd ../esp32/idf-tools/python_env  
  
ls  
/idf5.1_py3.11_env  
/idf5.2_py3.11_env
```

esptool.py

Esptool is installed as a component in:

```
../esp32/esp-idf/components/esptool_py/
```

From:
<https://wiki.oscardegroot.nl/> - **HomeWiki**

Permanent link:
<https://wiki.oscardegroot.nl/doku.php?id=esp:esp32:esp-idf-environment:python>

Last update: **2025/04/14 17:37**

