


Measure Small Resistance

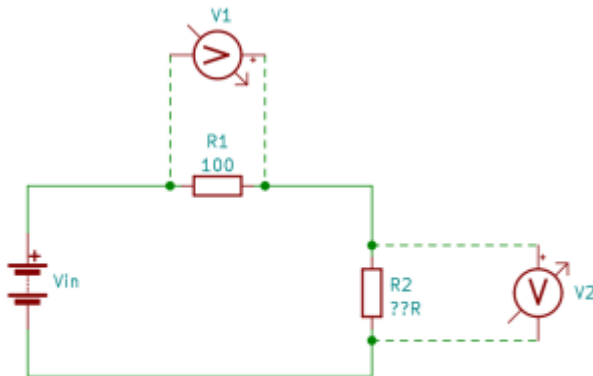

R_2 can be calculated as follows:
 $R_2 = V_2 / (V_1 / R_1)$

From:

<https://wiki.oscardegroot.nl/> - HomeWiki

Permanent link:

<https://wiki.oscardegroot.nl/doku.php?id=other:electronics:small-r-meter&rev=1699618309>

Last update: **2023/11/10 12:11**

