


Duplicating a measurement

In REW you can copy/duplicate a measurement. This could be useful to compare the result from different actions (smoothing, aligning, etc.). This can be done by the following steps:

1. In the All SPL window select the measurement to copy. Press “Actions”
2. Press “Measurement Actions”
3. Press “Response Copy”

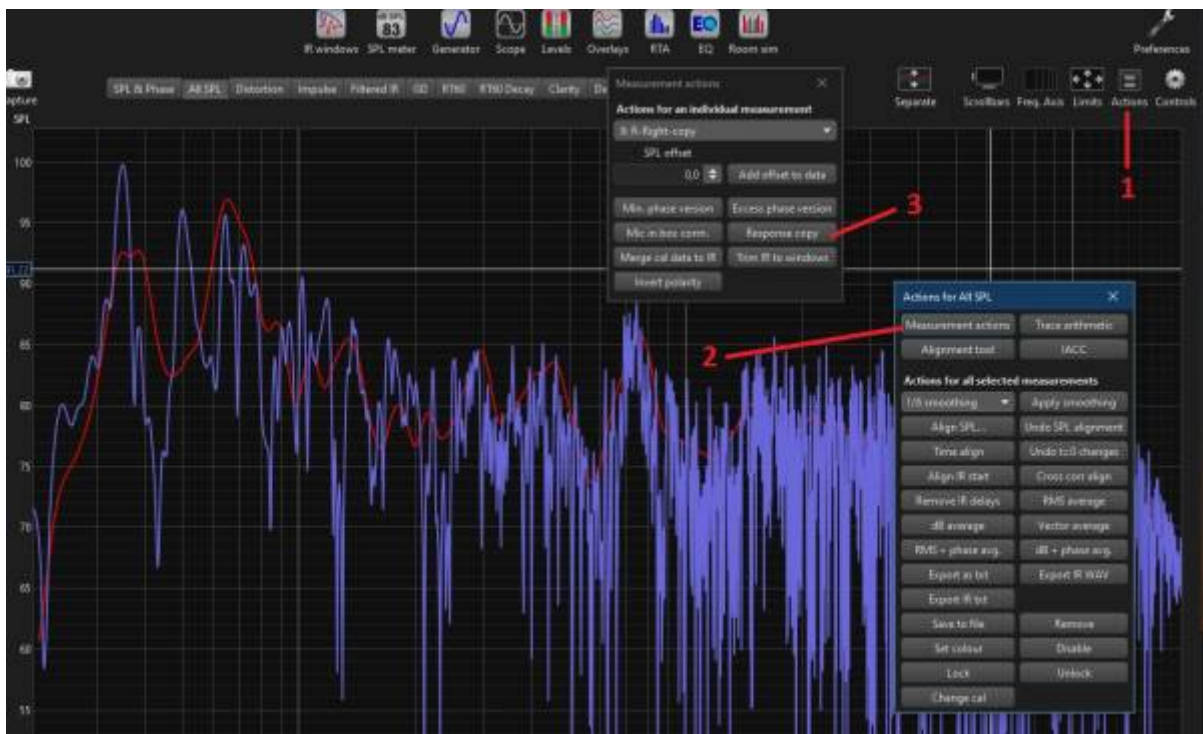

From:
<https://wiki.oscardegroot.nl/> - HomeWiki

Permanent link:
<https://wiki.oscardegroot.nl/doku.php?id=audio:rew:copy-measurement>

Last update: 2025/12/21 18:24

